







SPROCKET REPLACEMENT




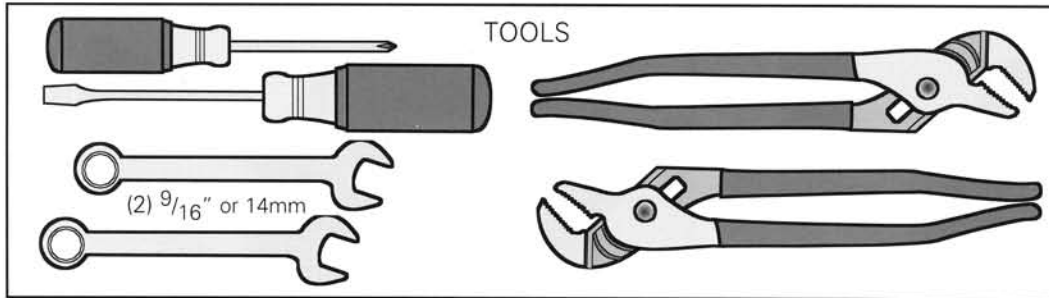


concept 2
ROWING

Morrisville, Vermont USA
www.concept2.com

Use Concept2 PN 1112

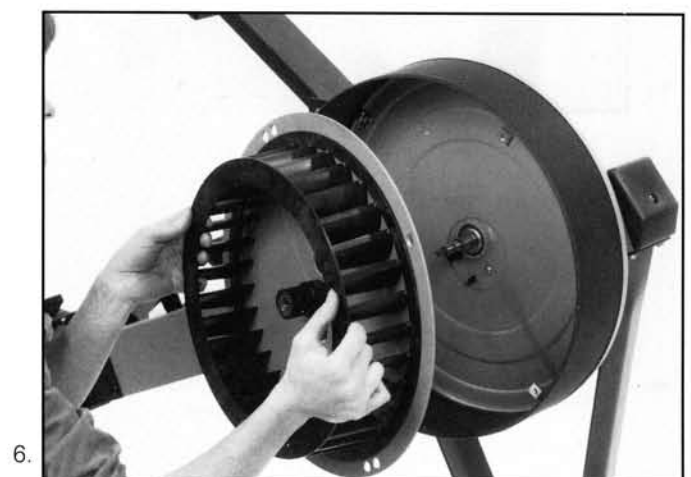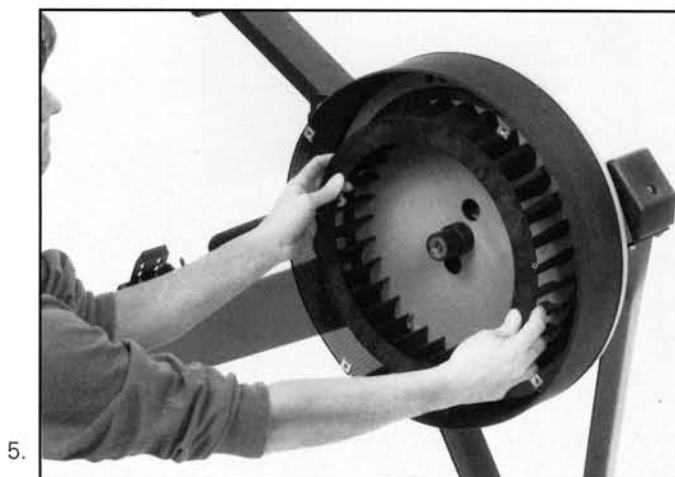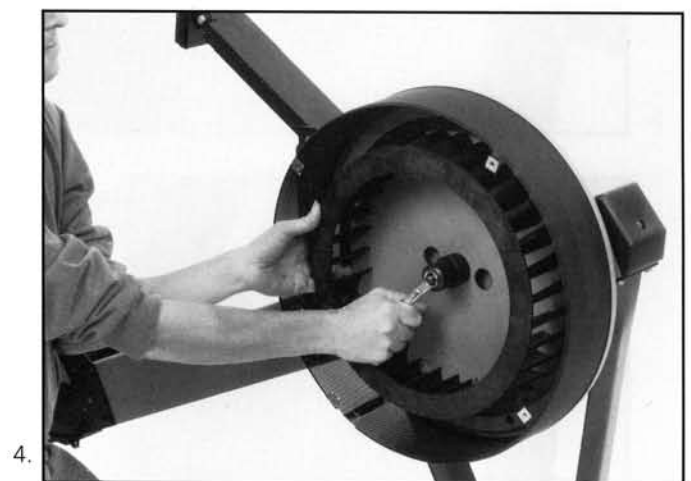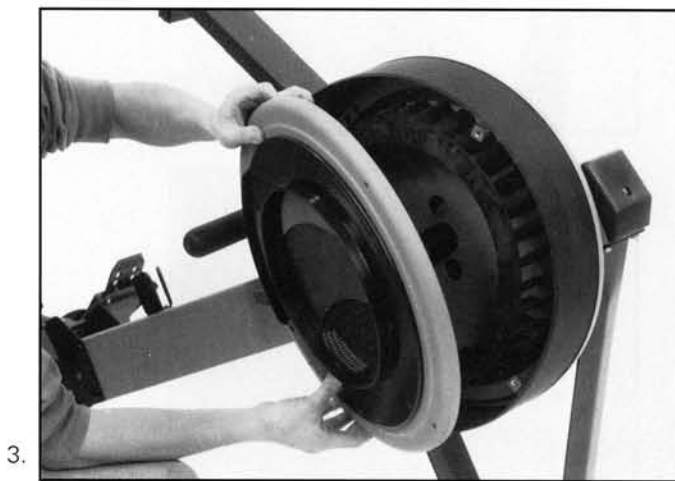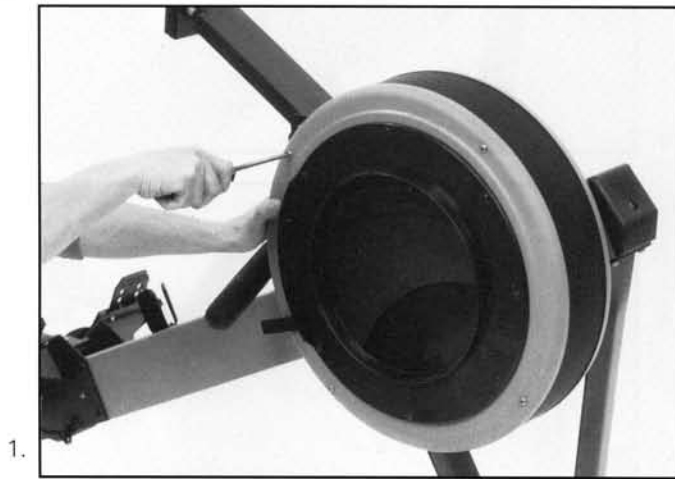


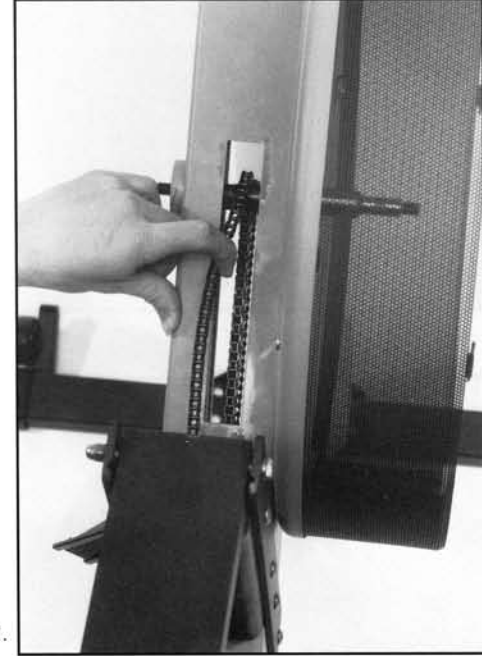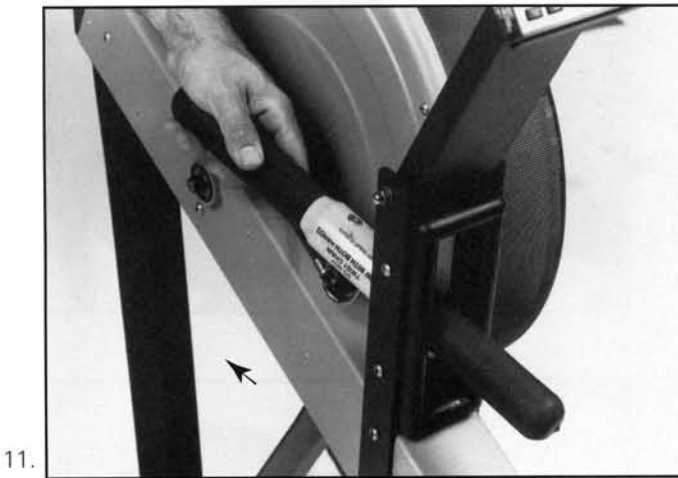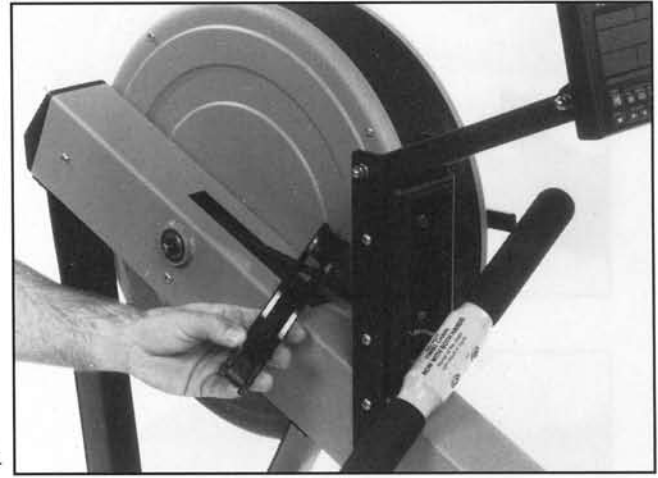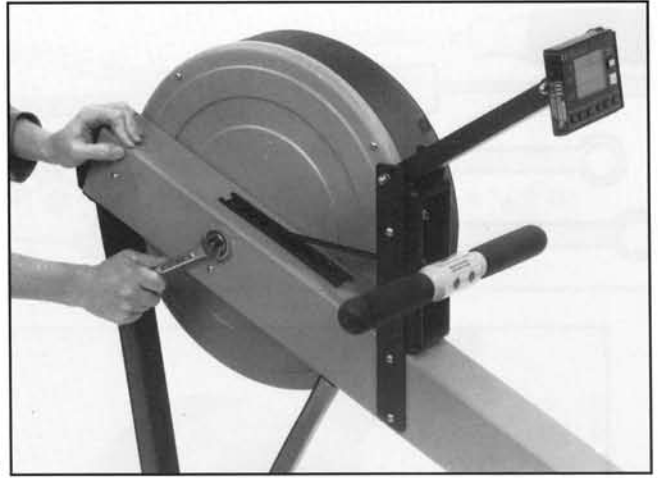


concept 2
ROWING

Morrisville, Vermont USA
www.concept2.com


SPROCKET REPLACEMENT

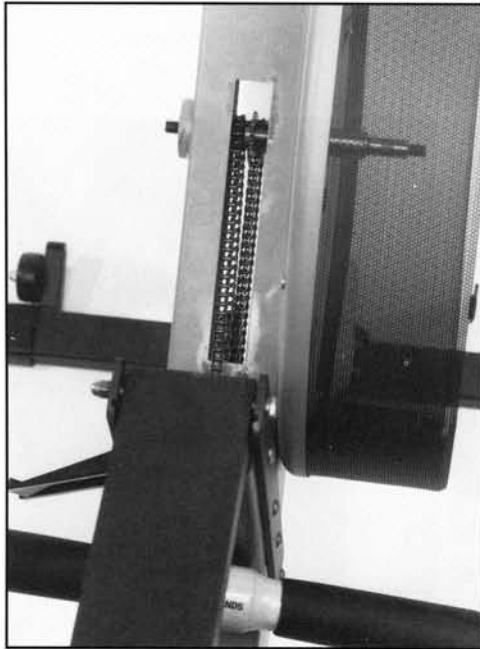

13.

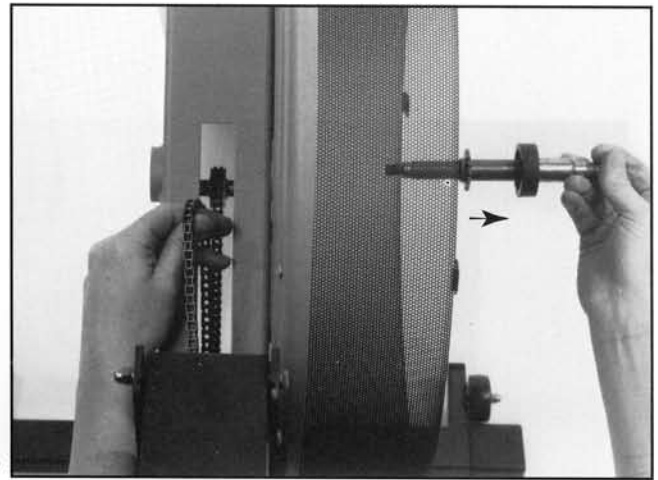

14.

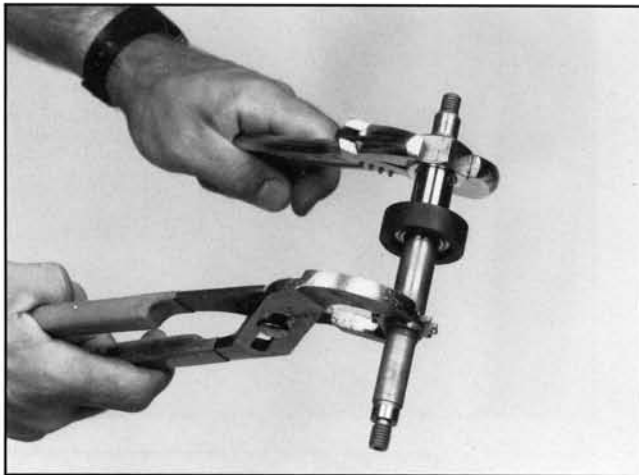


15.




16.

Replace with Concept2 PN1112

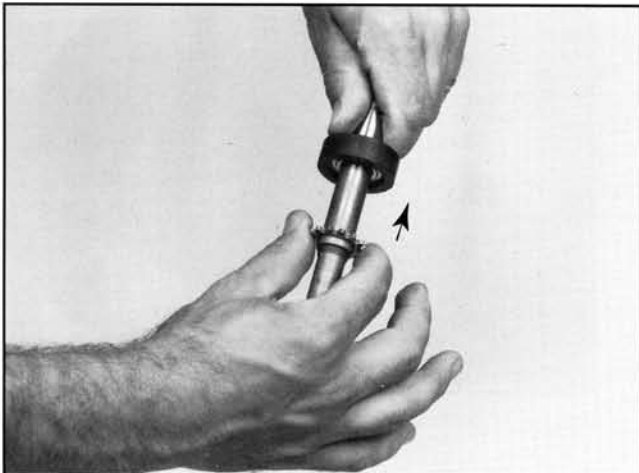





17.

Finger tighten only.

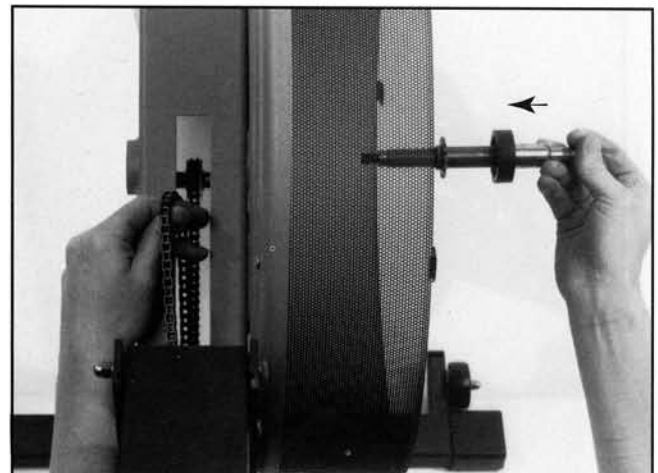

18.

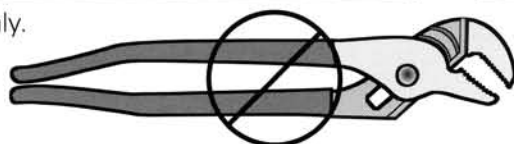

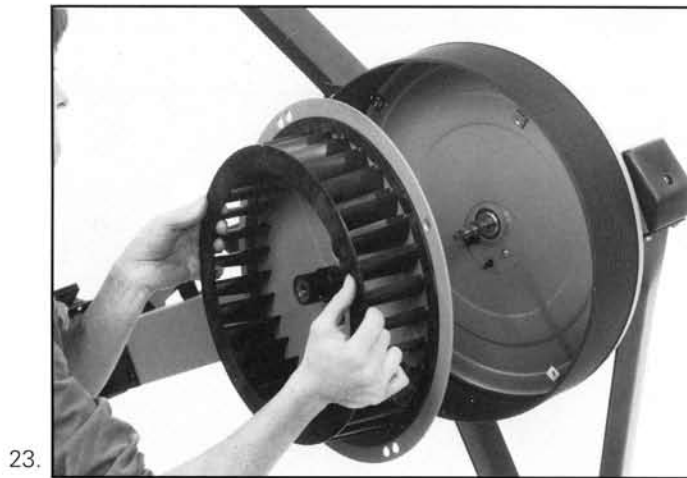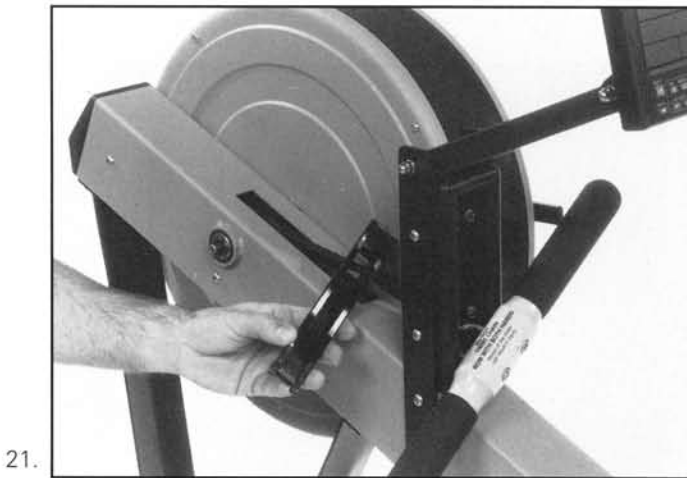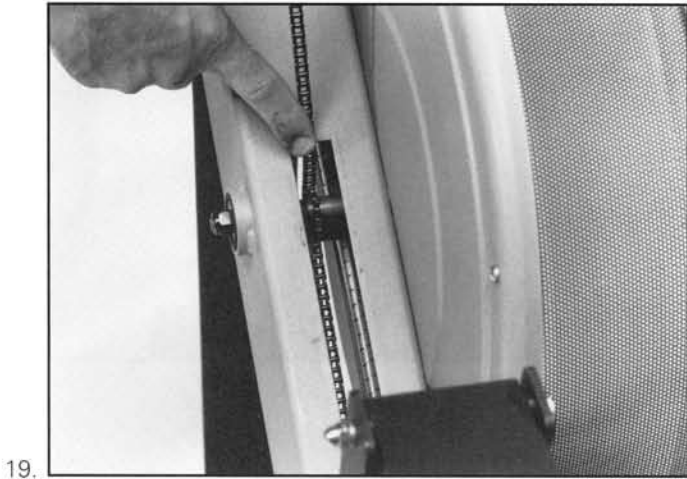

concept 2
ROWING

Morrisville, Vermont USA www.concept2.com

SPROCKET REPLACEMENT

